





图册编号 ID #	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes
1	可调方向管柱总成	STEERING COLUMN BRACKET ASSEMBLY	571 460 02 16	1	
2	护罩	GUARD	650 462 05 43	1	
3	半圆头圆柱螺栓	BOLT	301 990 00 21	4	
4	右塞堵	COVER	650 462 06 86	2	
5	半圆头圆柱螺栓	BOLT	655 990 00 21	1	
6	护罩	GUARD	650 462 09 43	1	
7	塞堵	COVER	357 462 01 96	1	
8	护罩	GUARD	655 462 02 43	1	
9	右塞堵	COVER	650 462 00 86	1	
10	塞堵	COVER	650 462 01 86	1	
11	右塞堵	COVER	650 462 02 86	1	
12	左塞堵	COVER	650 462 03 86	1	
13	塞堵	COVER	650 997 00 86	1	
14	护罩	GUARD	650 462 08 43	1	
15	左塞堵	COVER	650 462 04 86	1	
16	方向盘	STEERING WHEEL	518 464 00 02	1	
17	盖	STEERING WHEEL	518 464 01 25	1	
19	密封垫	SEAL WASHER	500 461 01 80	1	

图册编号 ID #	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes
20	加强环	STIFFENING RING	387 462 00 24	1	
21	自攻螺钉	SCREW TAP	N 007981 005317	4	
22	橡胶护套	RUBBER SLEEVE	500 461 03 96	1	
23	护管	PROTECTING TUBE	387 461 12 97	1	
24	垂臂	STEERING DROP ARM	506 463 01 01	1	
25	转向机支座	STEERING GEAR BRACKET	500 461 02 40	1	
26	液压泵	HYDRAULIC PUMP	506 460 00 80	1	
27	油管	FUEL PIPE ASSEMBLY	519 997 19 82	1	
28	油管	FUEL PIPE ASSEMBLY	506 460 45 24	1	
29	油壶支架	BRACKET	520 466 00 14	1	
30	油壶	FUEL TANK	207 460 00 02	1	
31	油管	FUEL PIPE ASSEMBLY	520 997 00 84	1	
32	转向机	STEERING GEAR	506 460 09 01	1	
33	油管	FUEL PIPE ASSEMBLY	881 997 01 52	1	
34	直拉杆	STEERING DRAGLINK ASSEMBLY	647 460 00 05	1	